

# Flag Care & Tips

This flag is not invincible and improper use will result in damage, so please take care of your flag.

## Important Tips to prolong the life of your product

### Feather and Teardrop Shaped Flags



Feed the Pole through the sleeve



Hook the loop around the hook on the handle



You can tighten or loosen the cord if necessary

### Sail Flags



Feed the short thin pole through the top sleeve



Feed the main pole through most of the sleeve



Connect the two together then finish feeding the sleeve on the main pole



Hook the loop around the hook on the handle



You can tighten or loosen the cord if necessary



**DO NOT** use in extreme weather conditions  
The Flag can be used in wind speeds up to 18mph. If you use the flag in speeds above 18mph you will limit the life-span of your flag



**DO NOT** let your flag rub against the wall or the ground as this will cause unnecessary wear on the light material



**DO NOT** put bases in the bag.  
The Bag is for the flag and the pole only and is not designed to take weight.

**BEFORE USE.** To remove any excess ink or fabric coating from the printing process we recommend hand rinsing your flags with cold water until the water runs clear. Dry naturally.

 Wash a dirty flag at 30° with a mild detergent in the washing machine.

Due to the environment that flags and bases can be used we are unable to give a guarantee on them and that it is your responsibility to maintain and care for the product, failure to do so may shorten the flag and accessories life span.



**WHEN PUTTING THE FLAG AWAY** do not pull the pole out from the bottom, instead, pinch the end of the flag and shake, the pole should slide out.

**DO NOT STORE THE FLAG WET** If the flag was wet when taken down, you must dry it as soon as possible.